



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Polaris Crew 570 Full Cab for Hard Windshield

Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Cab Enclosure**.

TOOLS NEEDED:

Scissors

Lighter

Chalk or light marker

The enclosures for the Polaris Crew 570 were designed to be modular. Each enclosure panel can be installed independent of the other panels. As a result, you choose your level of coverage. For cold weather, you have the option of full coverage, windshield, top, doors, and back panel. When warm, store the doors and back panel and leave only the windshield and top on.

Install the modular cab enclosure in the following order:

- Back Panel
- Door Panels
- Top

Step 1: Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Mark the location of the windshield clamps with a piece of chalk. Remove your top and windshield.

Step 3: Before installing each panel, with an assistant, hold the panel to the cab frame. Note the location of Velcro loop strips that are sewn into the enclosure. Adhesive Velcro hook strips will be installed to correspond to the Velcro loop strips sewn into the enclosure. Please refer to the attached adhesive hook kit table and pictures for approximate installation locations.

Step 4: Remove the backing from the adhesive hook strips and install as indicated in the attached adhesive hook table and pictures. **PLEASE NOTE....the adhesive strips that run the length of the front roll bars must be cut to accommodate the windshield clamps. Follow the instructions accordingly.**

Step 5: After all adhesive Velcro strips are attached, starting with the back panel, begin attaching the door/rear window combo to the cab frame. As you work, square each panel to the cab frame.

Step 6: After installing the door panels, pull each door panel forward to the edge of the front roll bars. When installed properly, the binding between the canvas fabric and the webbing strips should rest along the outer edge of the windshield.



Step 7: The webbing/Velcro strip that runs the length of the front roll bars will need to be cut to accommodate the windshield clamps and the grab handle. With chalk, mark the webbing strip where cuts will be made. **DO NOT CUT INTO THE BINDING.**



Step 8: Cut the webbing strip with household scissors. **AGAIN, DO NOT CUT INTO THE BINDING.** Seal the frayed edges with a lighter. Have a wet cloth handy to dab the edges if needed.



Cut the Tab being very careful not to cut the binding at the edge.



Seal Frayed Tab thread at the cut area using a lighter


Step 9: Pull the enclosure forward and wrap the enclosure around the front roll bars. Attach the webbing strip to the attached adhesive hook strips.

Step 10: Repeat any steps necessary to achieve a snug fit on the cab frame.

Step 11: Re-install your windshield, top, and rear panel.


See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.

Adhesive Hook Kit Contents/Placement		
BACK PANEL		
Reference	Qty-Size	Placement
A	1-48"	Attach horizontally to the bottom of the rear window panel area corresponding to the sewn in loop in the rear panel.
B	2-18"	Attach vertically to the rear roll bar uprights corresponding to the sewn in loop on the sides of the rear panel.
C	2-8"	Attach horizontally along the top of the rear window panel area corresponding to the 8" sewn in loop on each side/top of the rear panel.
D	3-4"	Attach horizontally along the top of the rear window panel area corresponding to the 4" sewn in loop on top of the rear panel.
E	2-5"	Attach horizontally along the top of the rear window panel area corresponding to the 5" sewn in loop on the top of the rear panel.
F	6-10"	Wrap horizontally around rear roll bar uprights corresponding to the doubled-sided straps on each side of the rear panel. When back panel is in place, wrap double-sided straps around adhesive hood strips.

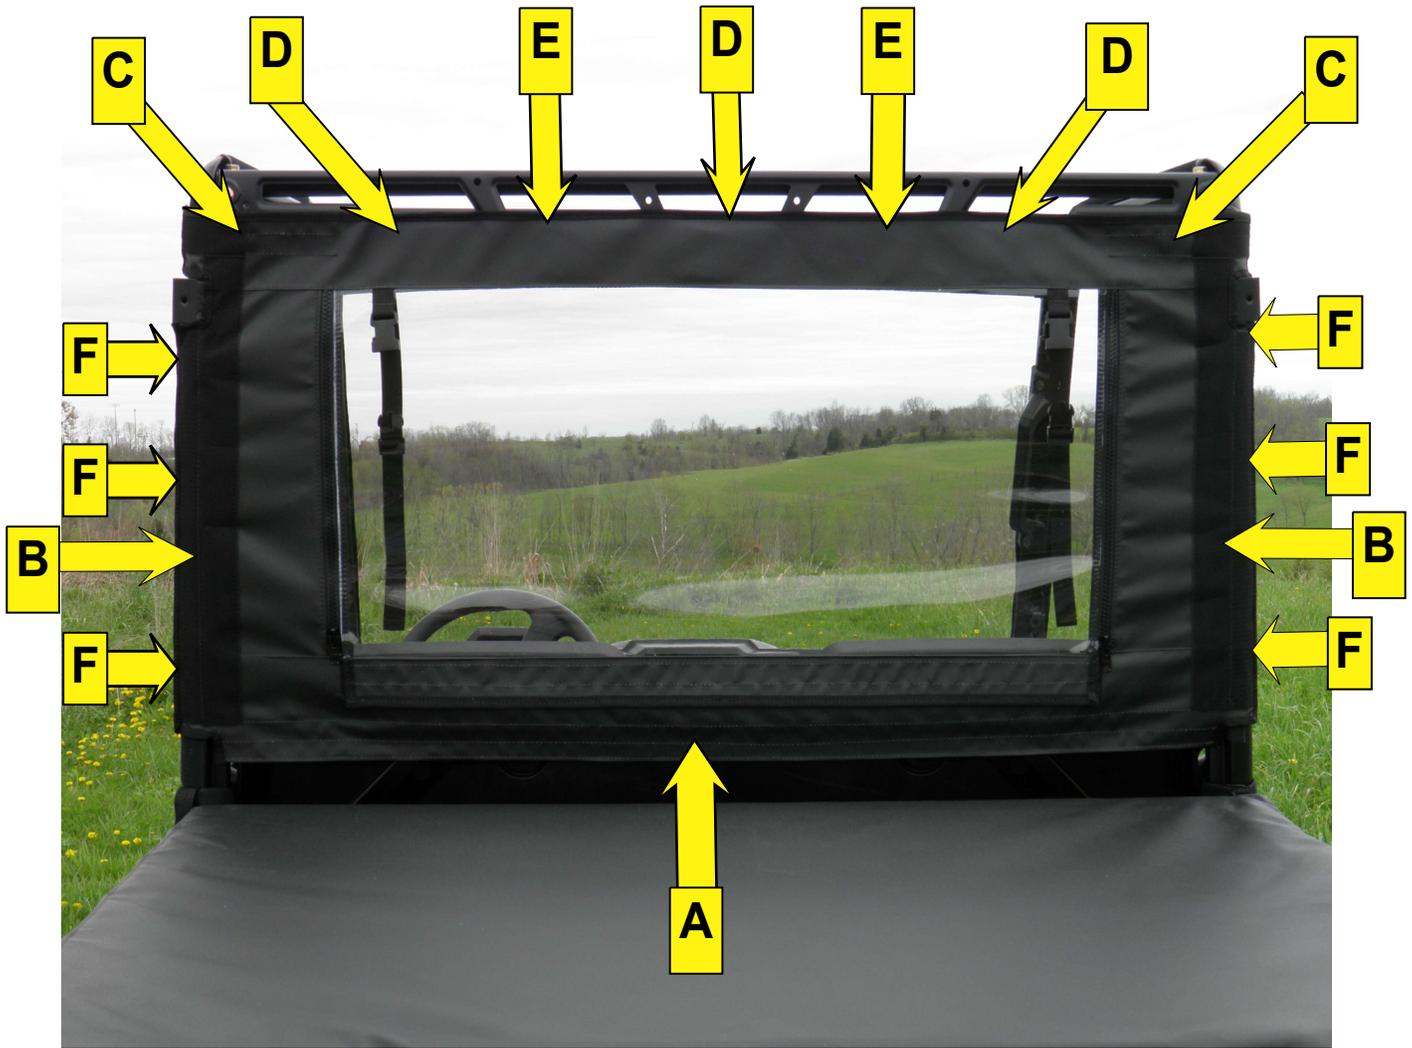

ADHESIVE HOOK KIT		
Reference	Qty/Size	Placement
DOOR PANELS		
A	2-17"	Top of front doors-Inside edge of roll bar-Horizontal
B	2-22"	Top of rear doors-Inside edge of roll bar-Horizontal
C	2-5"	Top/Rear of door panels corresponding to 5" sewn-in loop strip
D	4-26"	If installed with rear panel, adhesive strips are not needed. Attach sewn-in loop to sewn-in hook on rear panel. Rear roll bar uprights-Vertical-2 rows (CUT TO ACCOMMODATE CLAMPS IF NEEDED)
E	2-8"	Back side of rear door panel
F	2-31"	Lower/back side of rear door panel
G	2-15"	Bottom of rear doors
H	2-36"	Bottom of front doors
I	2-3"	Bottom of front panel
J	2-16"	Front/Bottom of front panel
K	2-10"	Front of front panel
L	2-5"	Bottom of front panel
M	2-24"	Front roll bar uprights-Under windshield CUT TO ACCOMMODATE CLAMPS IF NEEDED)

N	2-7"	Top of front roll bar uprights
O	2-8"	Middle of middle roll bar uprights-Wrap double-sided straps around hook strip.
P	2-8"	Top of middle roll bar uprights-Wrap double-sided straps around hook strip.
Q	4-8"	Top and bottom of bracket at top of middle roll bars. Used to cover sharp edge of bracket.
S	2-8"	Middle cross bar at end of bracket. Wrap end of strap around bar to hold top of side panel in place.

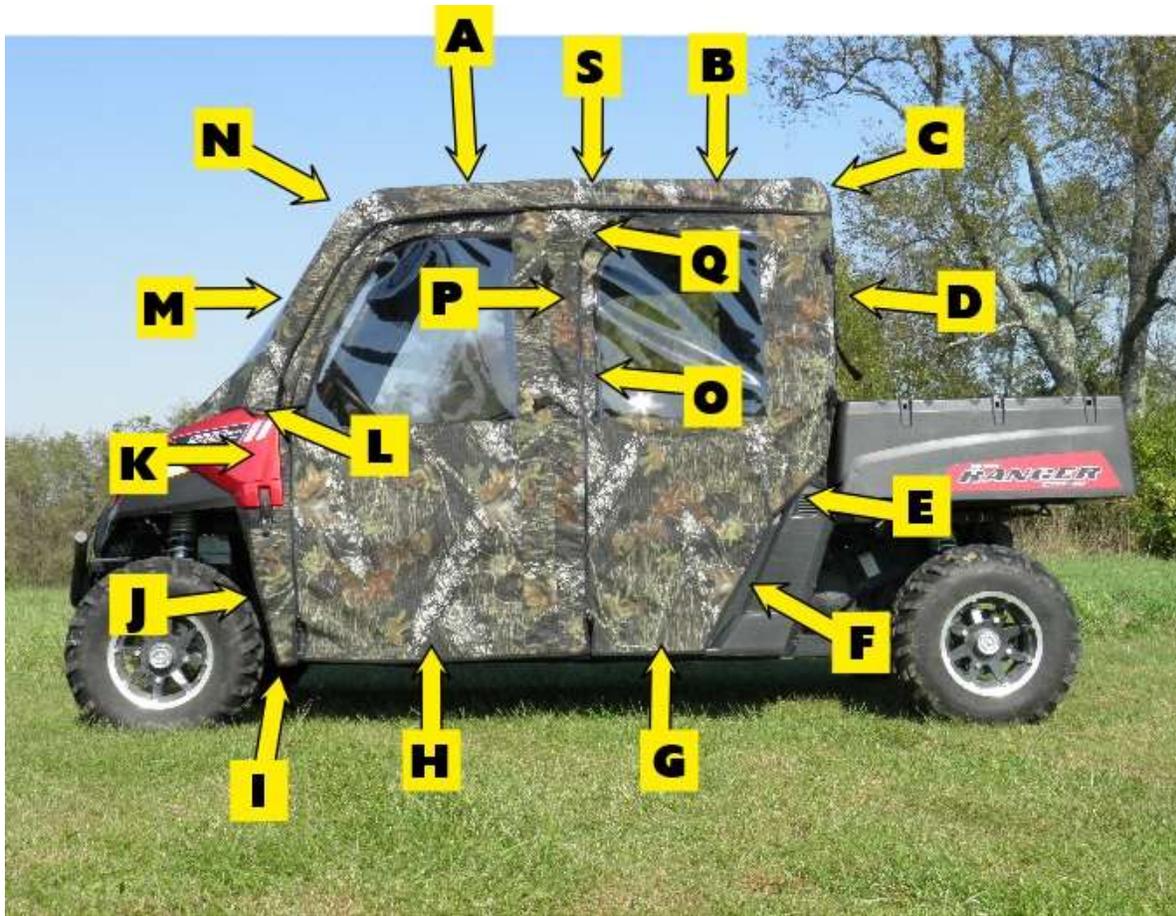

Reference	Qty/Size	Top Cap
A	4-6"	Wrap horizontally around roll bar uprights near the bottom of the front and rear roll bars. The double-sided straps on the bottom of the tension straps wrap around the adhesive strips to hold the tension straps in place.
B	2-6"	Wrap horizontally around the middle roll bar uprights corresponding to the sewn-in double-sided straps at the middle/bottom of the side panels. Wrap the double-sided straps around the adhesive hook strips.





3 STAR INDUSTRIES

Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the full cab enclosures and door/rear window combos should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.